


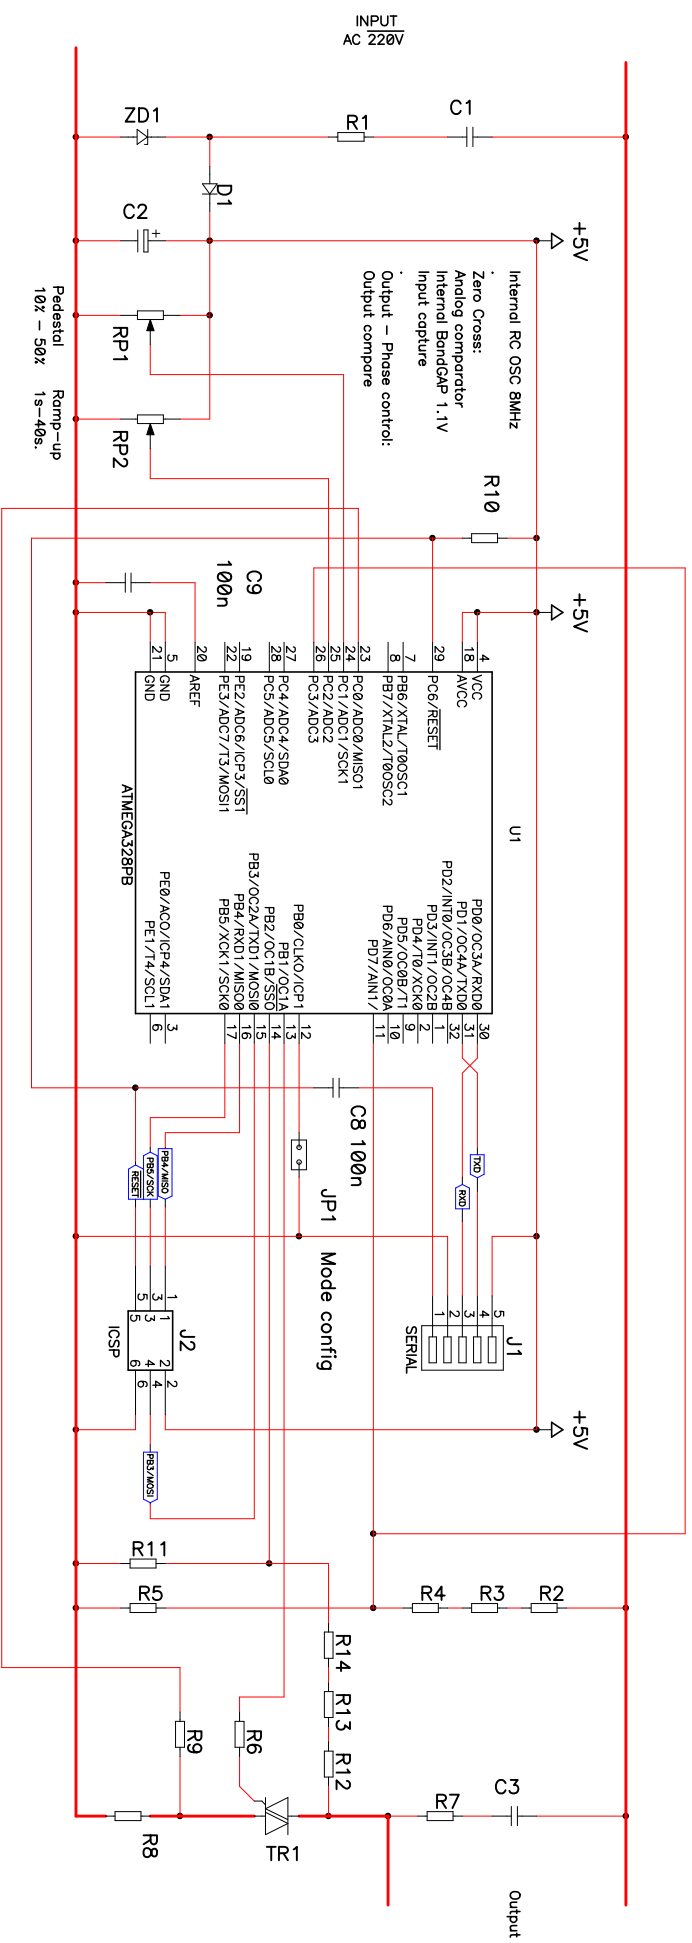

Current sense : Used to restart SoftStarter when JP1 is closed
(restart when NO output current)
Optional: Current protection

Operational modes:
JP1 – open Soft-start after PowerUp
JP1 – closed SoftStart after load was
connected (signal on PB2)

Title			AC 220V Soft starter		
Size	Number		Rev		
A3					
Date	Drawn by		Sheet		
Filename			of		